
## **APPENDIX RA-13**


## IMMERSION HEATER INSTALL AND WIRING INSTRUCTIONS


- 1. On ET2 models only, install into a 3/4 inch NPT coupling using a reducer bushing supplied; or for existing/ replacement applications the 1/2 inch NPT connection in the reservoir requires a 23/32 inch drill opening.
- 2. Must be immersed at all times
- 3. Mount horizontally only
- 4. Operate on a rated voltage heaters are not dual voltage
- 5. Use on AC only
- 6. Lead wires are color coded heater leads are red, thermostat leads are black. The ET2 Series heaters have the thermostat wired internally and no black leads are present.
- 7.T-60 ambient air thermostat (optional) set to close at 40° F. To be wired into circuit at points T1 and T2 see diagram D.
- 8. Above 10 AMP draw or 480V or 3 phase, use relay see diagram B or C
- 9. To calculate amperage draw:


SINGLE PHASE	THREE PHASE
AMPS = <u>WATTAGE</u>	AMPS = <u>WATTAGE</u>
VOLTS	VOLTS x 1.73

Below 10 AMP draw 1 phase, no relay - see diagram E

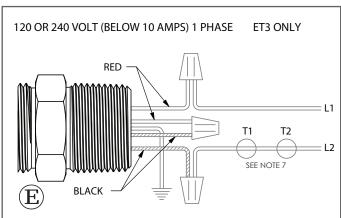

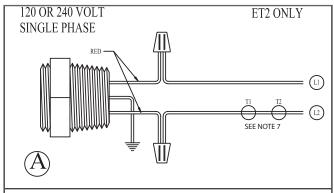

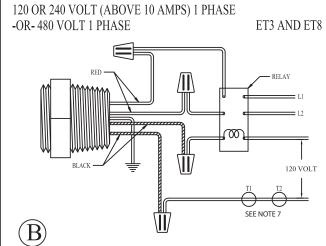

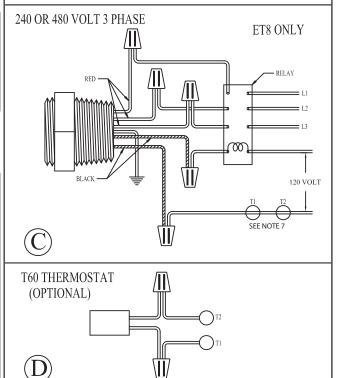

Dimensions and specifications are subject to change without notice. Not all items are Made-To-Stock, contact us for availability.