JMP MOTOR ADAPTERS FOR EL


ADAPTER MOUNTING SPACER

Adapter Mounting Spacers are designed to be used in conjunction with a pump motor adapter to increase the face to face spacing between the motor and pump when a standard pump motor adapter alone does not have the proper face to face spacing required for the application.

Standard Feature:

Standard Material:

- Machined pilots that easily mount to the motor end of the adapter
- Cast Aluminum

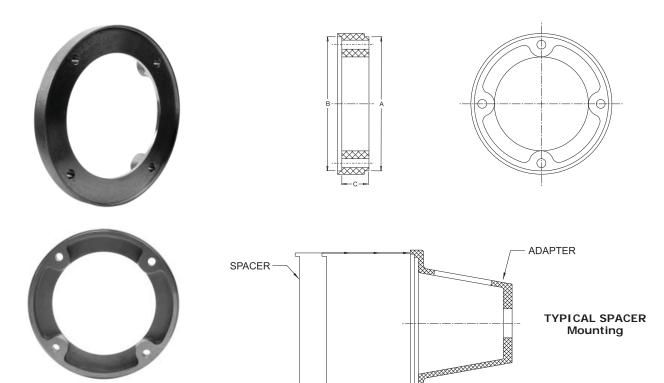

Adapter Mounting Spacers						
	Dimensions (inches)					
Motor Size	A	В	С	Part No.	Remarks	Example
56C, 143TC, 145TC, 182/184UC	4.500 4.497	4.501 4.504	1.000 .998	2114	Spacer can be used with any 56/145 size pump/motor mount to add 1.00 inch to the face to face dimension	(1) 2114 spacer + (1) 6028 pump/motor = 5.25 inches face to face dimension
182/256TC 213/256UC	8.500 8.497	8.501 8.503	1.000 .998	1962	Spacer can be used with any 182/256 size pump/motor to add 1.00 inch to the face to face dimension	(1) 1962 spacer+ (1) 1960 pump/motor mount = 6.00 inches face to face dimension
284/286TC 284/286TSC 284/286UC	10.500 10.497	10.501 10.503	.500 .498	3047	Spacer can be used with any 284/286 size pump/motor mount to add .50 inch to the face to face dimension	(1) 3047 spacer+ (1) 1981 pump/motor mount = 7.69 inches face to face dimension
284/286TC 284/286TSC 284/286UC	10.500 10.497	10.501 10.503	1.750 1.747	1992	Spacer can be used with any 284/286 size pump/motor amount to add 1.75 inches to the face to face dimension	(1) 1992 spacer+ (1) 1981 pump/motor mount = 8.94 inches face to face dimension
324/405TC 324/405TSC 324/405UC 324/405USC	12.500 12.497	12.501 12.503	1.250 1.247	1993	Spacer can be used with any 324/405 size pump/motor mount to add 1.25 inches to the face to face dimension	(1) 1993 spacer + (1) 1984 pump/motor mount = 8.87 inches face to face dimension

Dimensions and specifications are subject to change without notice. Not all items are Made-To-Stock, contact us for availability.

